

1 Appearance
 ① DIP Switch ② Alarm in Terminals ③ Module-connecting Interface (Input)
 ④ Module-connecting Interface (Output) ⑤ Debugging Port

Note:
 The module-connecting interface is used to connect other alarm in modules or sub modules such as keypad modules, touch-display modules, etc.

2 Terminal

Alarm in Terminals
 JST1 to JST5: Alarm in Input

① 485-: Module-connecting Interface (Input)
 ② 485+: Module-connecting Interface (Input)
 ③ DC 12V: 12 VDC Power Input
 ④ GND: Grounding
 ⑤ 485-: Module-connecting Interface (Output)
 ⑥ 485+: Module-connecting Interface (Output)
 ⑦ 12VOUT2: 12 VDC Power Output, 0.5 A
 ⑧ GND: Grounding

3 Installation

★ Wall Mounting

4 Configuration

★ Connection between the Door Station, Indoor Station and Alarm In Module

Note: After connecting to the door station, the module can call the linked indoor station. You can set relative parameters via the web client of the door station.

Before You Start

- Connect the module to a door station device through module connecting interface.
- Note:* You can refer to the picture on the right (part 4) for more information about the connecting approach.
- Link indoor station to the door station.
- Login to the web client of the door station.

After login to the web client of the door station,

- Click **Configuration** --> **Intercom**--> **Press Button to Call** to enter the configuration page.
- Select **Sub Module** from the drop-down list.

Note: You can Set **No.** of the sub module via the DIP switch.


- Fill in the **Room No.** of the Indoor Station in the blank of the **Button Settings** column.
- After configuration, you can press the button on the module to call relative Indoor Station.

Note: You can also set time schedule by clicking **Configuration** --> **Intercom**--> **Schedule** --> **Video Intercom**.

Scan the QR code to view the user manual.





1

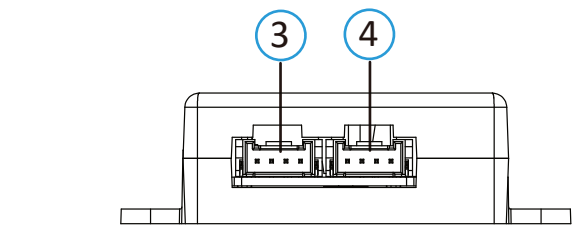


Use only power supplies listed in the user instructions:

Model	Manufacturer
KD8003-IME1	Hangzhou Hikvision Digital Technology Co., Ltd.
KD8003-IME1(B)	
KD8003-IME2	
KD8003Y-IME2	

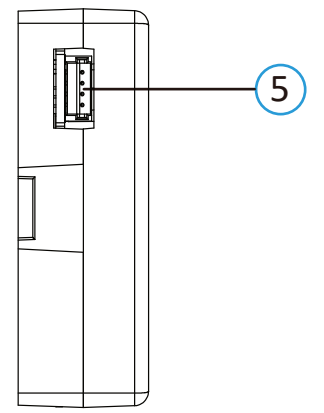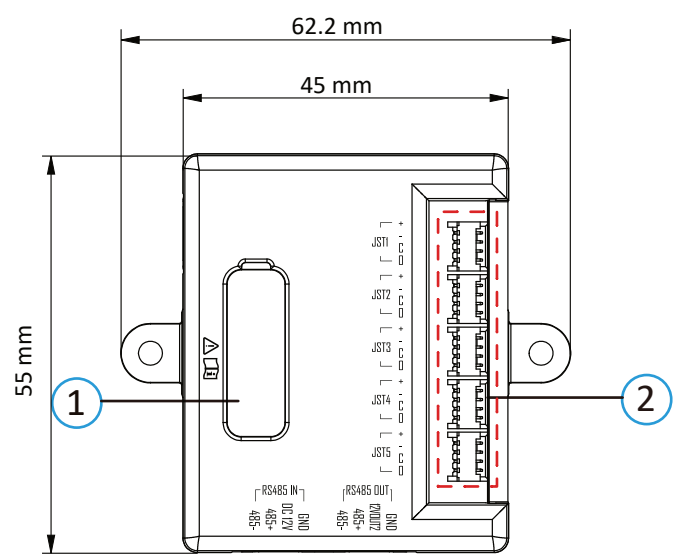



3

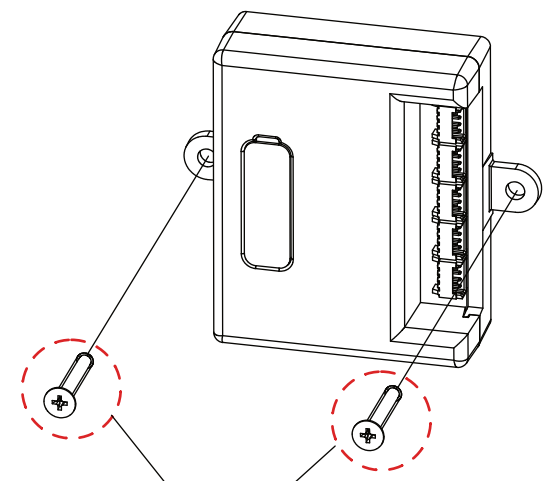

SC-KA3x25 Screw

Wall Mounting Step: Secure the module on the wall with 2 SC-KA3x25 Screws.

2

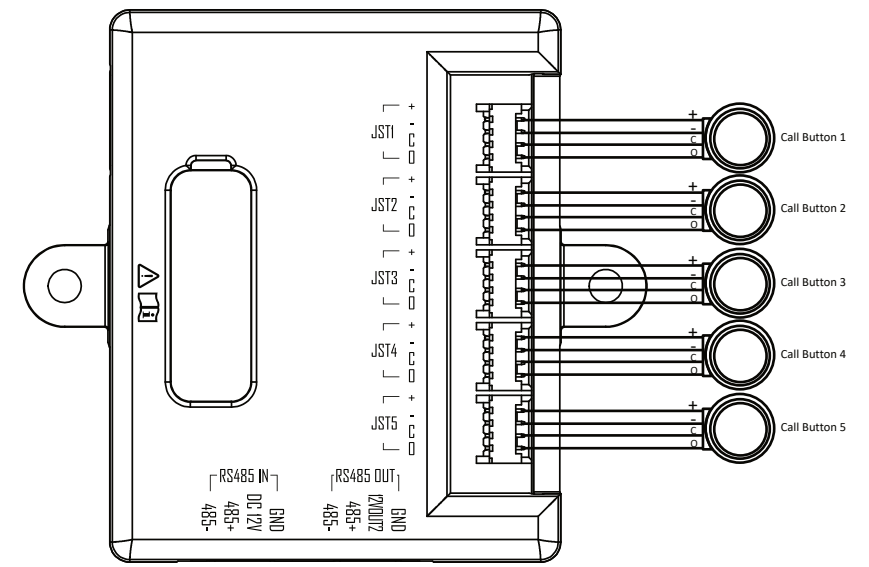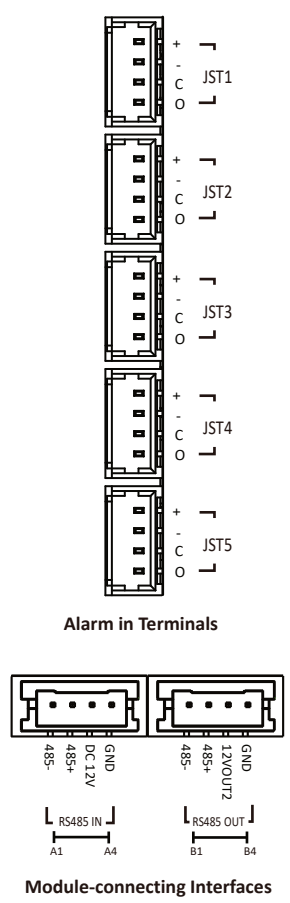

4

