



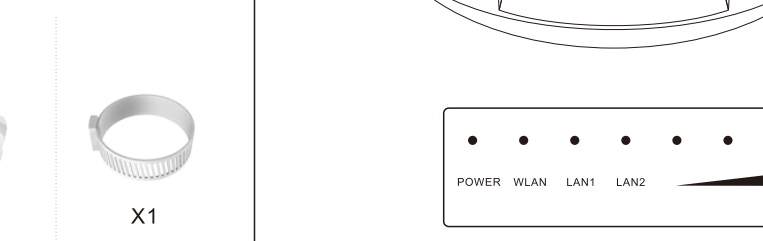


WI-CPE515H-KIT

5GHz 300Mbps Outdoor CPE with IP Camera
Quick Install Guide

Package content

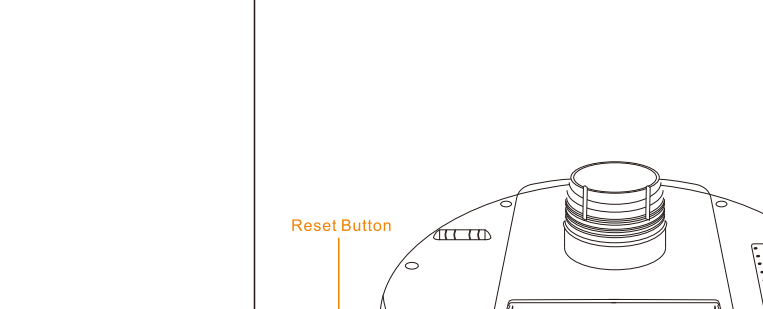


Hardware Overview

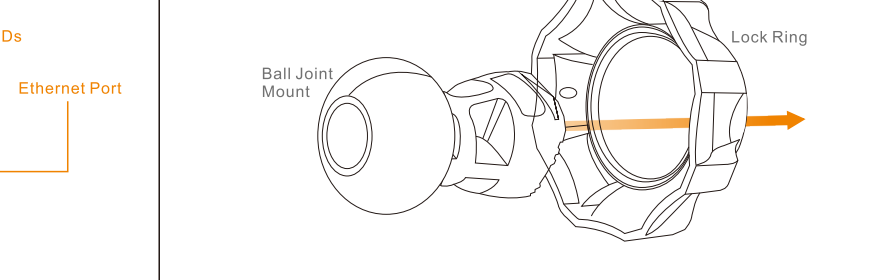


Mounting

Pole-Mount

1. Insert the Ball Joint Mount into the Lock Ring with the threads of the Lock Ring facing the ball joint.

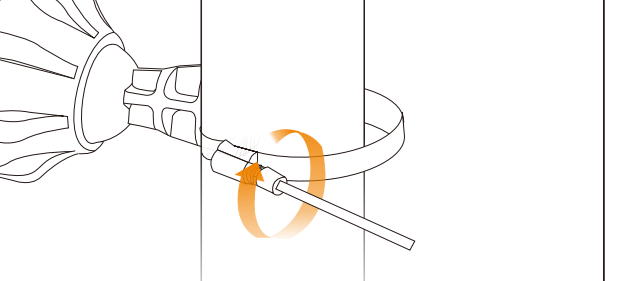


1. Open the Metal Strap and feed it through the base of the Ball Joint Mount.

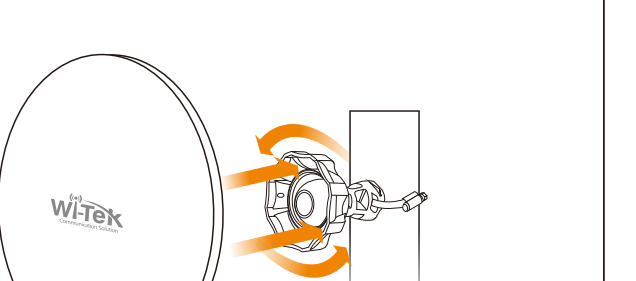


Mounting

3. Wrap the Metal Strap around the pole. Use a screw driver to turn the screw clockwise and securely fasten the strap to the pole.

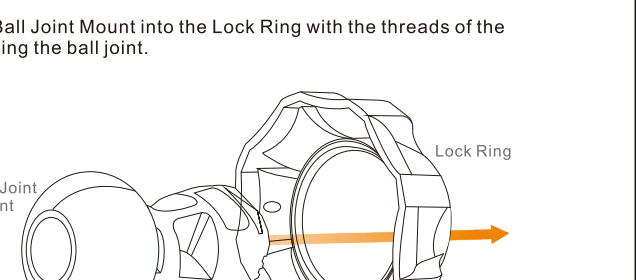


4. Attach the device to the Ball Joint Mount and turn the Lock Ring to secure it. Keep the Lock Ring loose enough to allow the device to pivot for aiming.

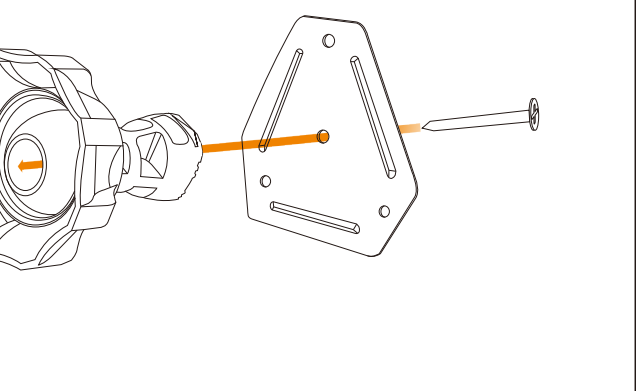


Mounting

Wall-Mount

1. Insert the Ball Joint Mount into the Lock Ring with the threads of the Lock Ring facing the ball joint.

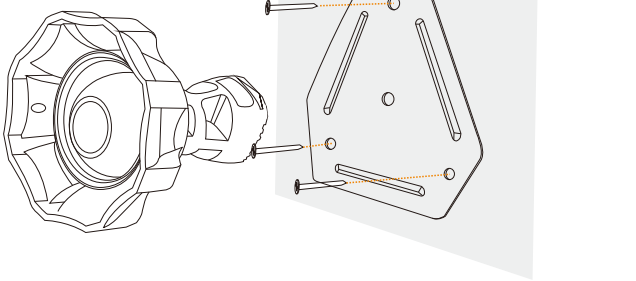


1. Insert the Ball Joint Mount into the Lock Ring with the threads of the Lock Ring facing the ball joint.

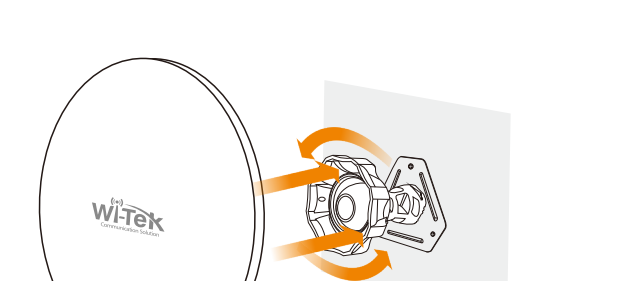

Note: Ensure the opening of the Ethernet cable is pointed towards the ground.


Typical Network

Point-to-Point Application

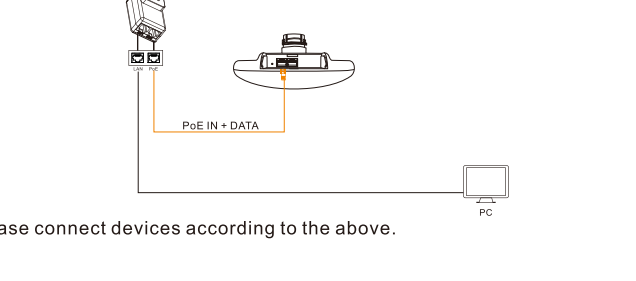


OR

Point-to-Multipoint Application

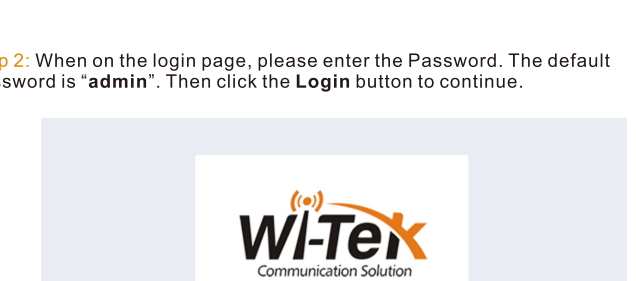

Configuring the Device

As a Base Station Mode

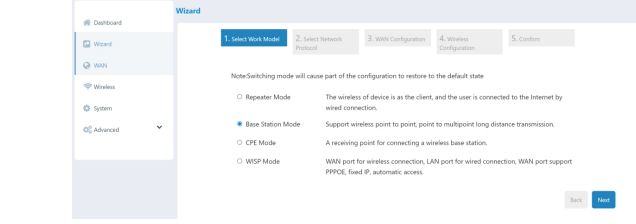


Please connect devices according to the above.

- Step 1: Launch the Web browser and enter the default IP address <http://192.168.1.88>.




- Step 2: When on the login page, please enter the Password. The default Password is "admin". Then click the **Login** button to continue.

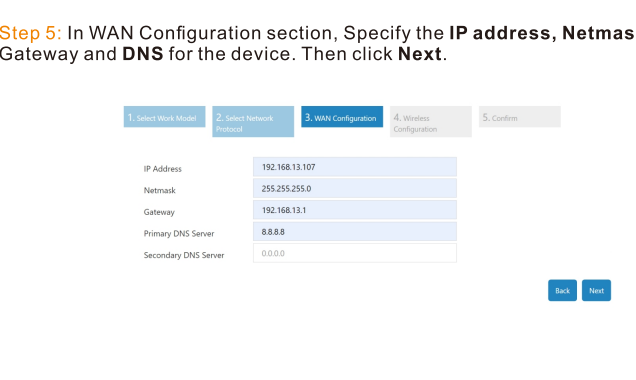


Configuring the Device


- Step 3: Go to the **Wizard** page, select **Base Station Mode**, and click **Next**.

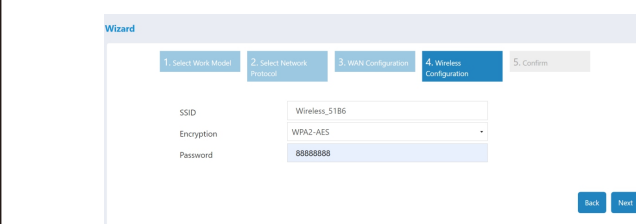

- Step 4: In the Network Protocol section, Select **Static IP**, and click **Next**.

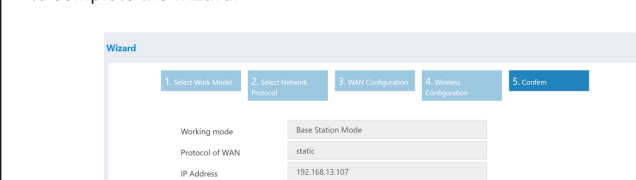


- Step 5: In WAN Configuration section, Specify the **IP address, Netmask, Gateway and DNS** for the device. Then click **Next**.

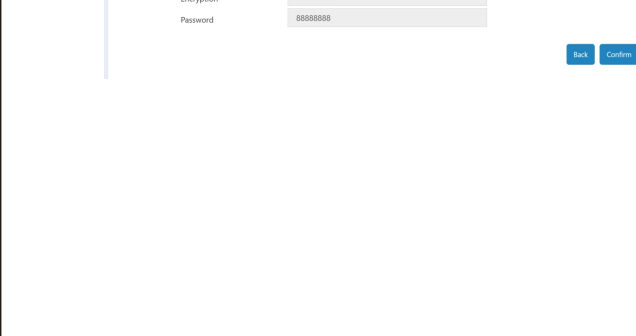


Configuring the Device

- Step 6: In Wireless Configuration section, Specify the **SSID, Encryption and Password** for the device. Then click **Next**.

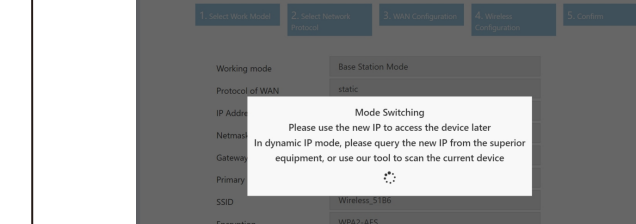


- Step 7: In the confirm section, review the configurations and click **Confirm** to complete the wizard.

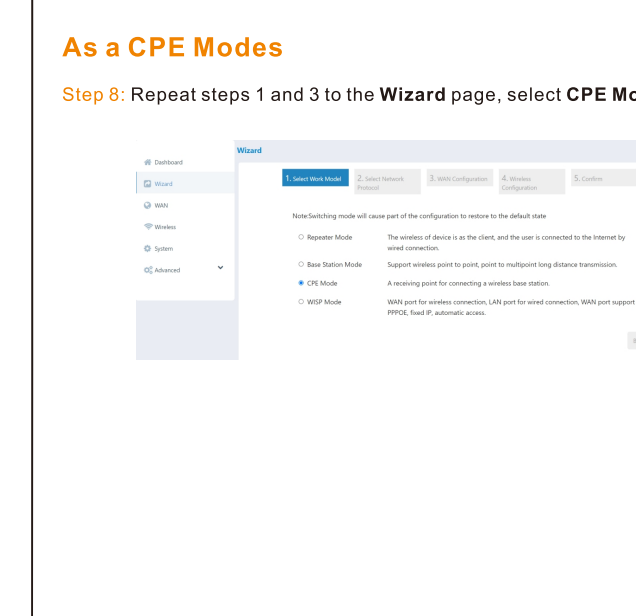


Configuring the Device


- Step 8: Repeat steps 1 and 3 to the **Wizard** page, select **CPE Mode**, and click **Next**.

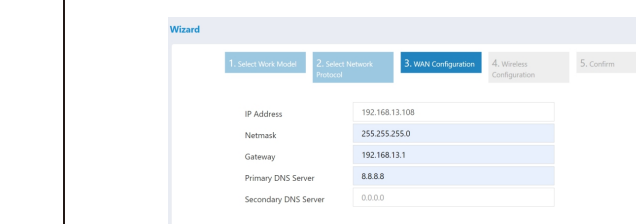

- Step 9: In WAN Configuration section, Specify the **IP address, Netmask, Gateway and DNS** for the device. Then click **Next**.

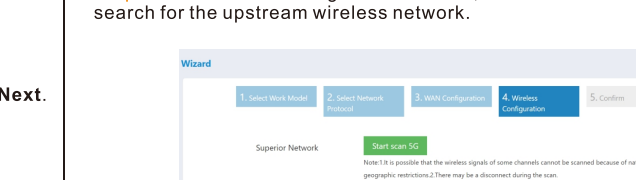


- Step 10: In Wireless Configuration section, Click **Start scan 5G** button to search for the upstream wireless network.

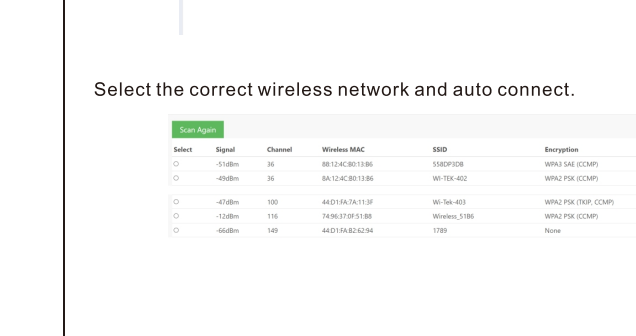


Configuring the Device

Select the correct wireless network and auto connect.

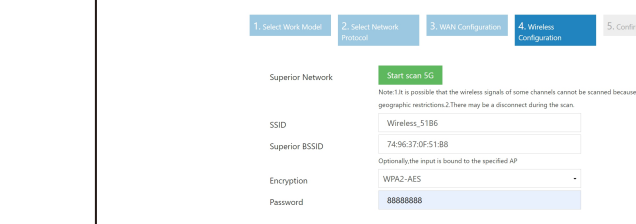


Note: Make sure that Encryption and Password are the same as the upstream wireless networks.

- Step: In the confirm section, review the configurations and click **Confirm** to complete the wizard.

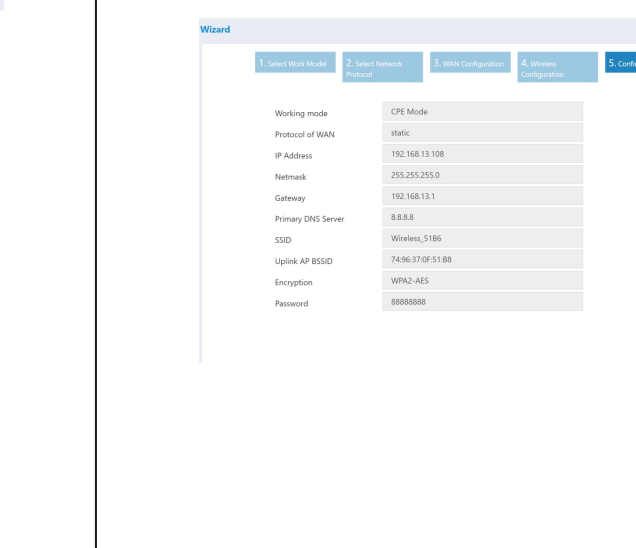

Configuring the Device

When LED indicators of both devices are on, the connection is available.

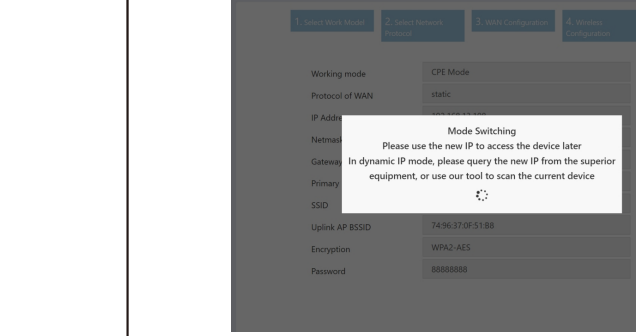

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Room 402 4F, BaoFan Technology Building, Bao'An
Avenue, FuYing Town, Bao'An district, ShenZhen
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com

